

MAINTENANCE


PROJECTION SCREEN MAINTENANCE

Protect your screen by keeping it rolled in its case when not in use. Always examine both front and back of surface before rerolling into case to make certain screen is free of dust, dirt or other foreign matter. Use a very soft duster brush to gently remove foreign particles.

CASE MAINTENANCE

The case of the screen has a Resistovar finish. This finish is resistant against: water, alcohol, marring, scratching, and nail polish remover. To help maintain the best appearance of the case it is recommended that the case be polished with any reputable liquid or paste wax polish. An oil type polish is not recommended because it allows for the collection of dust and finger prints. When necessary, this finish may be wiped with a damp soft cloth using a mild soap solution, rinsed with clear water and dried with a soft cloth.

Operating Instructions For Designer Manual Screen

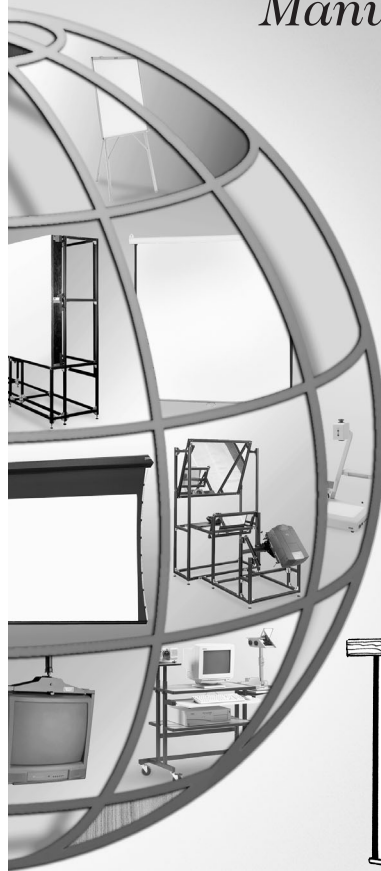

The
POWER *In*
PRESENTATION PRODUCTS



DA-LITE SCREEN COMPANY, INC.

3100 North Detroit Street
Post Office Box 137
Warsaw, Indiana 46581-0137
Phone: 574/267-8101
800-622-3737
Fax: 574/267-7804
[http:// www.da-lite.com](http://www.da-lite.com)
e-mail: info@da-lite.com


FOR WALL MOUNTING

HARDWARE PROVIDED

- 2 – “V” Bars (one is factory mounted to the back of the case; one will be mounted to the wall)
- 6 – Toggle Bolts, 4"
- 6 – Lead Shields, #10-14 x 1½"
- 6 – Phillips Flat Head Wood Screws, #10 x 2"

TOOLS REQUIRED

- Electric Drill
- Masonry Bit 5/16" (if mounting in solid masonry or concrete)
- Screw Driver, #2 Flat Tip (if using toggle bolts) or #2 Phillips (if mounting in solid masonry or concrete)

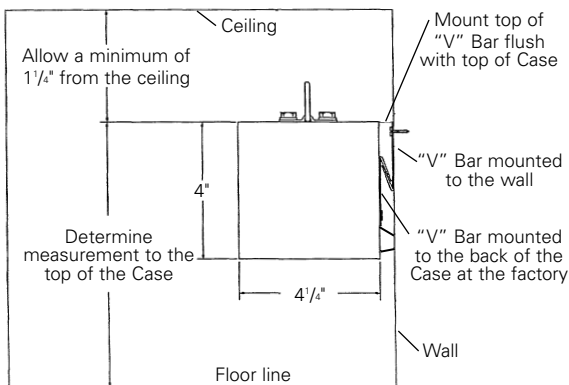

INSTALLATION INSTRUCTIONS

Determine the height of the top of the case from the floor. This will be the height of the wall mounted “V” bar.

Hold the loose “V” bar to the wall at the height determined above (MAKE SURE IT IS LEVEL), and mark the location for the screw holes. To mount the “V” bar on solid concrete or masonry wall, drill 5/16" holes and insert the lead shields. Fasten the “V” bar to the wall using the #10 x 2" wood screws. If you are mounting to a hollow wall, drill 1/2" holes and insert the toggle bolts. Then fasten the “V” bar to the wall with the toggle bolts. Now set the case in place on the wall with the “V” bar of the case nestled into the “V” bar on the wall.

FOR CEILING SUSPENSION

Position and properly anchor screw hooks into ceiling, beam or other solid surface. Then proceed to use the two “D” rings that are factory mounted to the top of the case to hang the case securely.

TO LOWER AND RAISE PICTURE SURFACE

To lower the picture surface, pull the screen down all the way. Then hesitate and allow the screen to retract very slowly until it locks in place. To raise the picture surface pull down on the pull bail, then raise quickly, as a window shade. Keep control of the picture surface. Do not allow it to roll uncontrolled into the case or damage to the screen is sure to result.