

The
POWER *In*
PRESENTATION PRODUCTS



**Instruction Book for
IMAGER**



DA-LITE SCREEN COMPANY, INC.

3100 North Detroit Street
Post Office Box 137
Warsaw, Indiana 46581-0137
Phone: 574-267-8101
800-622-3737
Fax: 574-267-7804
Toll Free Fax: 877-325-4832
www.da-lite.com
e-mail: info@da-lite.com

LARGE WALL BRACKET (47" LONG)

Quantities vary by screen size:
Screens 80" and smaller viewing width = 1
Screens over 80" to 96" viewing width = 2
Screens over 96" viewing width = 3

QUANTITY INCLUDED _____



Installation screws not included

#10 SCREW

Quantity = 16
(8 attached to frame)

QUANTITY INCLUDED _____



SNAP STUD

QUANTITY INCLUDED _____



SMALL WALL BRACKET (8" LONG)

Quantity = 1. Only for screens
80" and smaller viewing width.

QUANTITY INCLUDED _____




Installation screws not included

CORNER BRACKET

Quantity = 4
(attached to frame)

QUANTITY INCLUDED _____

**USE INSTALLATION
METHOD NUMBER** _____

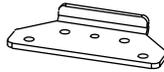

INSTALLATION

There are three methods of installation based on the size of the screen. Measure the width of the viewing area of your screen and refer to the appropriate method of installation below. The hanger bracket figure shows the type and quantity of bracket that is supplied based on the size of the screen.

Method 1: Screens 80" and smaller in viewing width.

Method 2: Screens over 80" up to 96" in viewing width.

Method 3: Screens over 96" in viewing width.

SETTING UP YOUR SCREEN

TOOLS REQUIRED: **Phillips Screwdriver**
 Carpenter's Level
 Tape Measure

FRAME ASSEMBLY

1. Place the four frame pieces on a clean floor.
2. Slide the frame pieces together at corners. (Note: Frame assembly holes may not appear to fit properly at the corners until all fasteners have been attached. Once fasteners are attached, the frame corners will be drawn in for a proper fit.) Secure frame pieces with #10 screws provided. Do not tighten screws until all are started, then tighten. See Figure 1.
3. Tighten the two screws at each corner. Do not over-tighten the screws.
4. Insert and tighten the snap stud in the center of the corner bracket (Figure 1).

ATTACH THE VIEWING SURFACE

Unroll the screen on a clean surface. Do not use newspaper. The viewing side is rolled to the inside of the roll. Place the frame over the screen surface, and while lifting the frame with one hand, snap the screen surface onto the frame with the other hand while maintaining a steady pull on the surface.

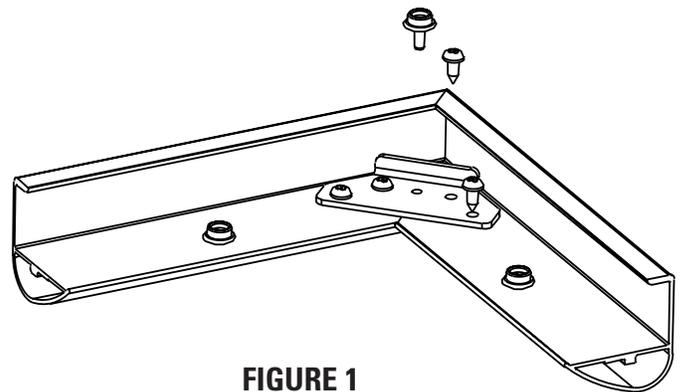


FIGURE 1

METHOD 1 (SCREENS 80" AND SMALLER IN VIEWING WIDTH)

Method 1

1. Secure the large wall bracket to wall studs at the desired height. Make sure the bracket is level. The top of the frame will be 1/8" above the top of the wall bracket when mounted. You will need at least 5/8" clearance above the bracket to hang the screen. Figures 2, 3, and 4 show the proper orientation for the supplied wall brackets.
2. To install the small wall bracket, you must measure the overall height of the screen frame and subtract 1-3/8". Using that dimension, measure down from the top edge of the wall bracket and mark the wall for two screw holes. The holes should be centered within the frame and 6" apart. Refer to Figure 3.
3. Attach the small wall bracket to the wall. Refer to Figure 4 for proper orientation. Do not tighten the screws completely. The bracket should slide up and down easily.
4. Hang the screen on the brackets by hooking the bottom of the frame onto the small wall bracket and lift up until you can hook the top of the frame on the top large bracket. Push down on the frame to seat it on the brackets. Refer to Figure 4.

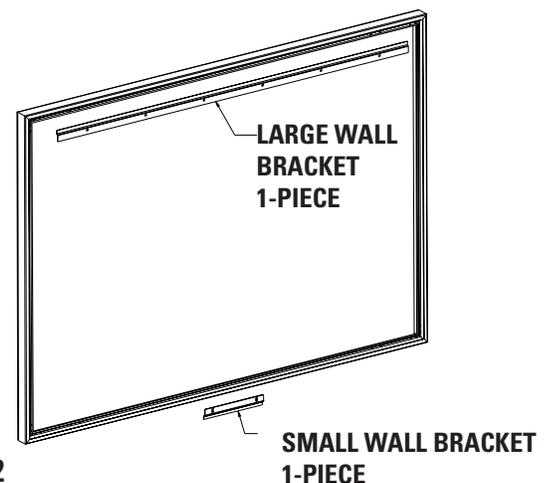


FIGURE 2

**SMALL WALL BRACKET
1-PIECE**

METHOD 1 (SCREENS 80" AND SMALLER IN VIEWING WIDTH)

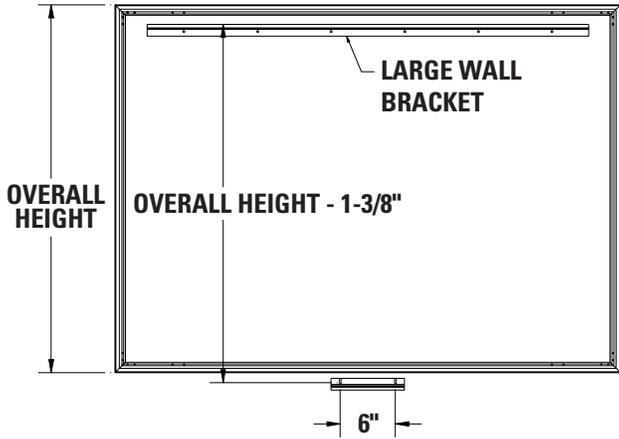


FIGURE 3

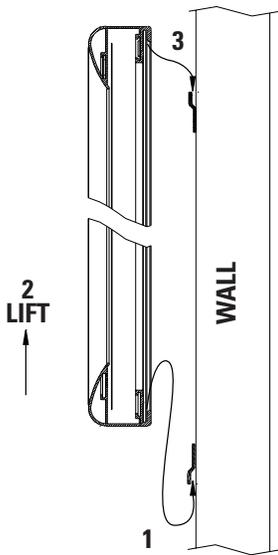


FIGURE 4

METHOD 2 (SCREENS OVER 80" UP TO 96" IN VIEWING WIDTH)

Method 2

1. Secure the large wall bracket to wall studs at the desired height. Make sure the large bracket is level. The top of the frame will be 1/8" above the top of the large wall bracket when mounted. You will need at least 5/8" clearance above the bracket to hang the screen. Figures 5 and 6 show the proper orientation for the supplied wall brackets.

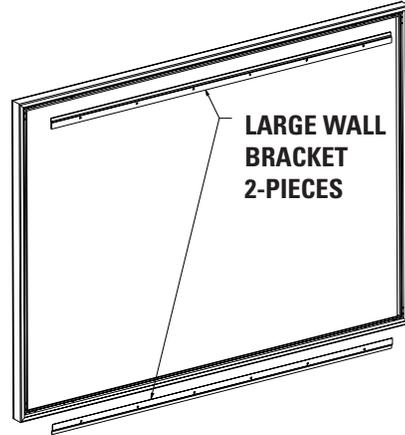


FIGURE 5

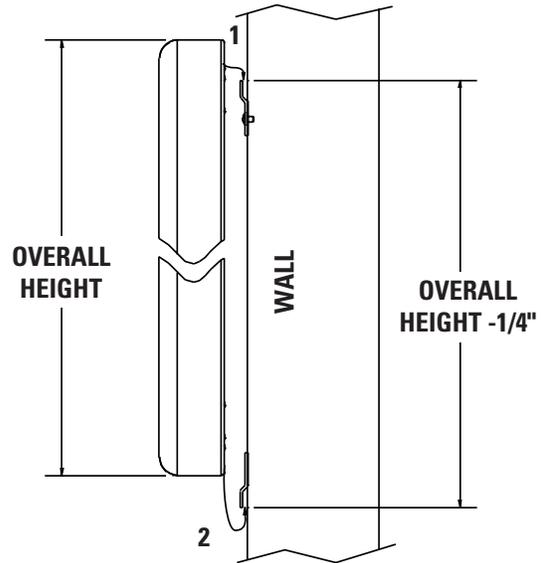


FIGURE 6

2. To install the lower wall bracket, you must measure the overall height of the screen frame and subtract 1/4". This is the dimension from the top of the upper wall bracket to the bottom of the lower wall bracket. See Figure 6.
3. Position the screen with the attached surface onto the top wall bracket as shown in Figure 6. Push down at the center of the bottom frame rail to hook onto the lower wall bracket.

METHOD 3 (SCREENS OVER 96" IN VIEWING WIDTH)

1. Secure the large wall brackets to wall studs at the desired height. Make sure the brackets are level. The top of the frame will be 1/8" above the top of the large wall bracket when mounted. You will need at least 5/8" clearance above the bracket to hang the screen. Figures 6 and 7 show the proper orientation for the supplied wall brackets.

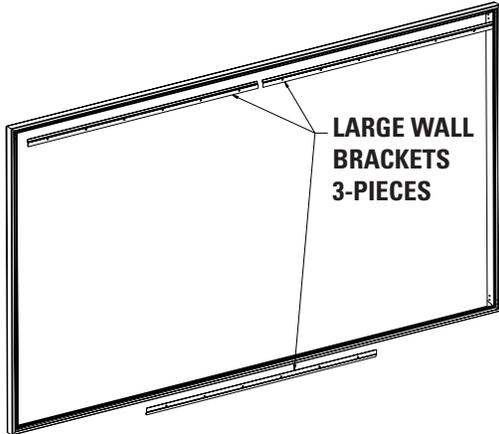


FIGURE 7

2. To install the lower large wall bracket, you must measure the overall height of the screen frame and subtract 1/4". This is the dimension from the top of the upper large wall bracket to the bottom of the lower large wall bracket. See Figure 6.
3. Position the screen with the attached surface onto the top large wall bracket as shown in Figure 6. Push down at the center of the bottom frame rail to hook onto the lower large wall bracket.

CLEANING

Da-Tex®, **Dual Vision**, **Pearlescent**, **Cinema Vision**, **Da-Mat®**, **High Contrast Da-Mat®**, **Audio Vision**, **High Contrast Audio Vision**, **High Contrast Cinema Vision** and **High Contrast Cinema Perf** surfaces can be cleaned as follows:

Using a white clean cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. Using a dry 100% cotton cloth, wipe dry after each cleaning session. To clean a stubborn stain or a sticky surface, use denatured alcohol (methanol or methyl alcohol) following the same procedure as for water.

