



# ***IMPORTANT SAFETY INSTRUCTIONS***

When using your video equipment, basic safety precautions should always be followed, including the following:

1. Read and understand all instructions before using.
2. Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
3. If an extension cord is necessary, a cord with a current rating at least equal to that of the appliance should be used. Cords rated for less amperage than the appliance may overheat.
4. To reduce the risk of electric shock, do not disassemble this appliance. Contact an authorized service dealer when repair work is required. Incorrect reassembly can cause electric shock when the appliance is used subsequently.
5. The use of an accessory attachment not recommended by the manufacturer may cause a risk of fire, electric shock, or injury to persons.

**SAVE THESE INSTRUCTIONS**

## PRE-INSTALLATION

1. Carefully unpack screen and remove outer wrapping from case.
2. Make sure to recheck measurements of screen location before installation.
3. Remove center support brackets (on 8' and wider screens only), reverse brackets and reinstall flush with the top of the box.

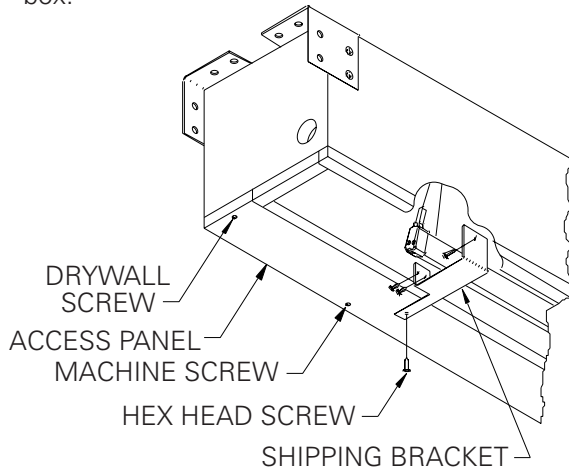


FIGURE 1

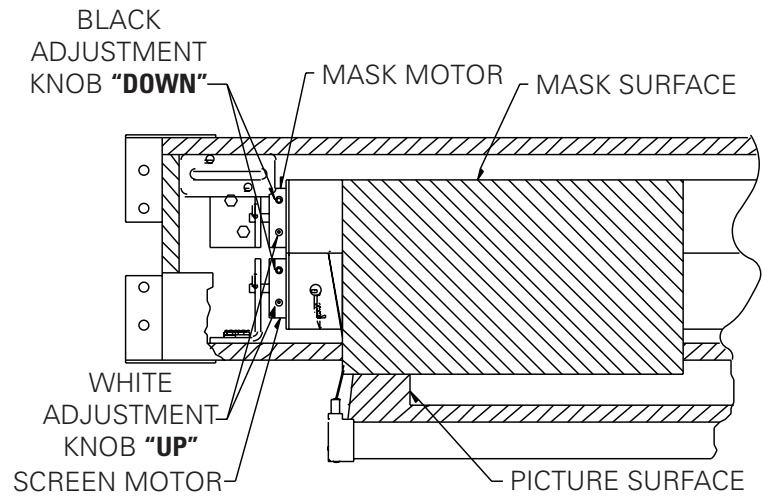


FIGURE 2

## INSTALLATION

1. Install screen by raising unit into position between joists at one end only. Install one lag screw in each mounting bracket.
2. Level unit lengthwise with a carpenter's level and plumb level. Secure opposite end.

**CAUTION!** Do not seal in until screen has been secured in position and properly tested for satisfactory operation.

3. Carefully remove three shipping brackets by removing six hex head screws from case and six hex head screws from aluminum slat. Use a hex socket and a ratchet. Slat should move freely (Fig. 1).
4. Detach access panel by removing screws (Fig. 1).
5. Remove junction box cover plate.
6. Install electric hook up that applies to your unit. Make sure to review your electrical installation checklist and wiring diagram (included) for either 120 volt switch, 220/240 volt switch or low voltage control.

**NOTE: Must be installed in accordance with the requirements of the Local Building Codes, the Canadian Electrical Code (CEC), CAN/CSA C22.1 and the National Electric Code (NEC), NFPA 70.**

**CAUTION!** DO NOT CUT TAPE ON FABRIC WITH A KNIFE OR ANY SHARP TOOL. REMOVE BY HAND.

7. Carefully remove two wood boards securing mask surface to case.
8. Test installation by carefully running picture and mask surfaces up and down several times. Be prepared to stop screen. Standard Duty Cycle: 1 MIN. ON / 3 MIN. OFF.

**NOTE: When rolled down, the picture surface should wrap fully around the roller. No part of the roller should be exposed. Picture and mask surfaces will automatically stop in the down position.**

The mask will start down off the front of the roller, travel completely down past the bottom of the viewing surface, then "step back" against the viewing surface to eliminate shadowing by rolling up the back side of the roller. Do not adjust the limits to change this feature.

9. Run the picture and mask surfaces upward. When the picture and mask surfaces are fully up the limit switches (in the motors) are tripped and the motors shut off.
10. Check for satisfactory condition by operating screen a few times. Reinstall access panel.

## SCREEN ADJUSTMENT FOR 120V SCREENS

**CAUTION! THE MASK SHOULD NOT BE FIELD ADJUSTED FOR MORE OR LESS DROP.**

Surface travel is stopped automatically in the fully opened and closed positions by limit switches that are properly adjusted at Da-Lite. Should it be necessary to adjust for more or less drop of picture, proceed in the following manner:

**NOTE:** Use a screw driver or allen wrench to make adjustments.

### MORE SCREEN DROP


1. Remove access panel (Fig. 1).
2. Place operating switch in "down" position.
3. When the screen stops, turn the black "down" limit knob (Fig. 2) one-quarter turn counterclockwise. Test by raising picture surface approximately two feet, then lower again. Repeat until desired picture surface position is attained.

**NOTE: Stop adjustment when string screws reach the bottom of roller and there is no wraps of string around the roller. Beyond this point the roller will start pulling up the aluminum slat, the fabric will still be coming down and severe damage to the fabric will occur!**

4. Replace access panel.

### LESS SCREEN DROP

1. Remove access panel. (Fig. 1).
2. Raise picture surface approximately two feet above desired level.
3. Place operating switch in "off" position.
4. Turn the black "down" limit knob (Fig. 2) one-quarter turn clockwise. Test by raising picture surface approximately two feet, then lower again. Repeat until desired picture surface position is attained.
5. Replace access panel.

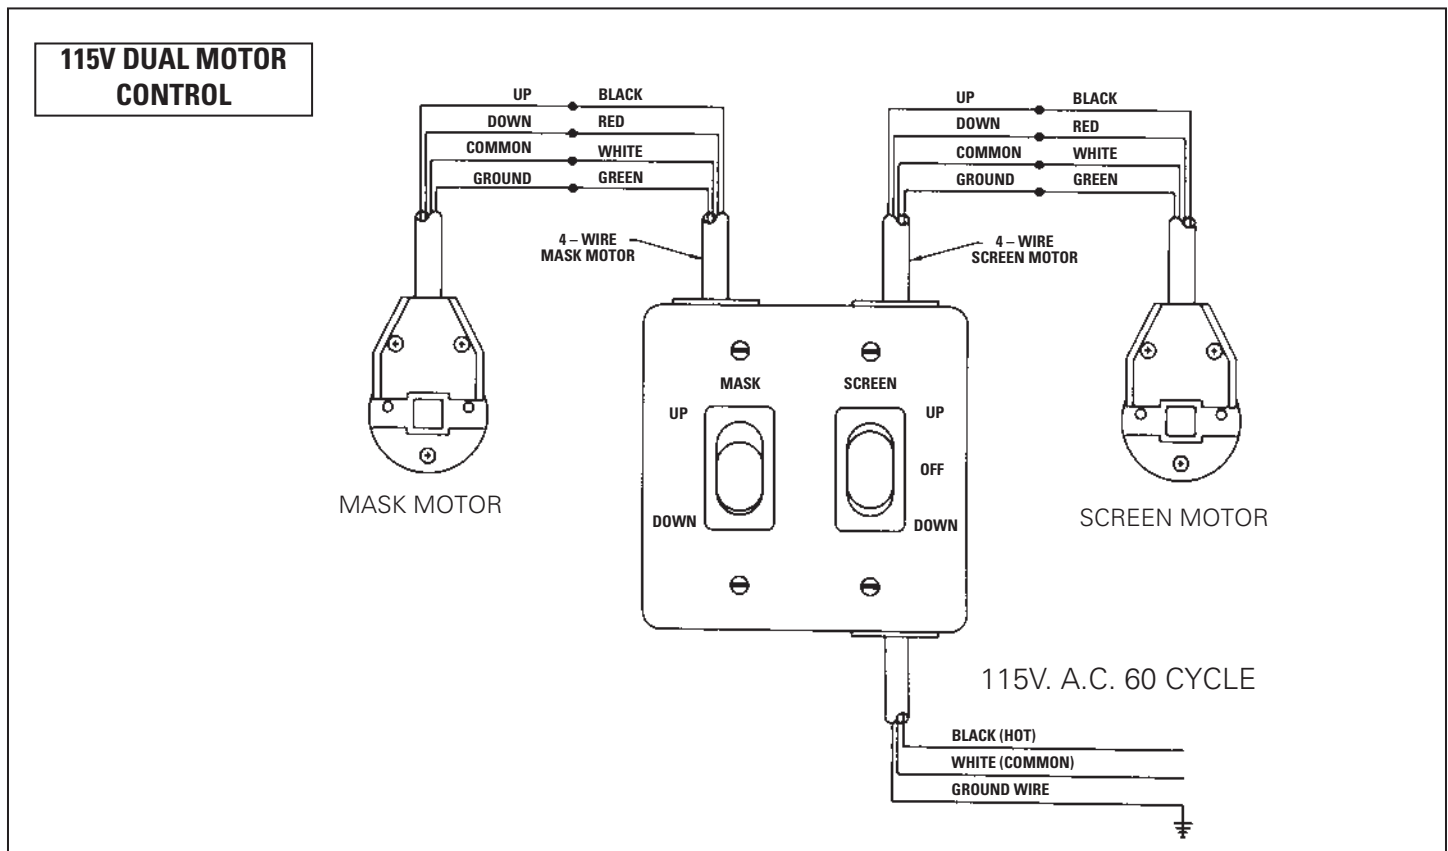

## SCREEN ADJUSTMENT FOR 220/240V SCREENS

**CAUTION! THE MASK SHOULD NOT BE FIELD ADJUSTED FOR MORE OR LESS DROP.**

Surface travel is stopped automatically in the fully opened and closed positions by limit switches that are properly adjusted at Da-Lite. Should it be necessary to adjust for more or less drop of picture, proceed in the following manner:

**NOTE:** Use a screw driver or allen wrench to make adjustments.

### MORE SCREEN DROP

1. Remove access panel (Fig. 1).
2. Place operating switch in "down" position.
3. When the screen stops, turn the red "down" limit knob (Fig. 2) one-quarter turn counterclockwise. Test by raising picture surface approximately two feet, then lower again. Repeat until desired picture surface position is attained.


**NOTE: Stop adjustment when string screws reach the bottom of roller and there is no wraps of string around the roller. Beyond this point the roller will start pulling up the aluminum slat, the fabric will still be coming down and severe damage to the fabric will occur!**

4. Replace access panel.

### LESS SCREEN DROP


1. Remove access panel. (Fig. 1).
2. Raise picture surface approximately two feet above desired level.
3. Place operating switch in "off" position.
4. Turn the red "down" limit knob (Fig. 2) one-quarter turn clockwise. Test by raising picture surface approximately two feet, then lower again. Repeat until desired picture surface position is attained.
5. Replace access panel.

## TENSIONED DUAL MASKING ELECTROL® INSTRUCTIONS

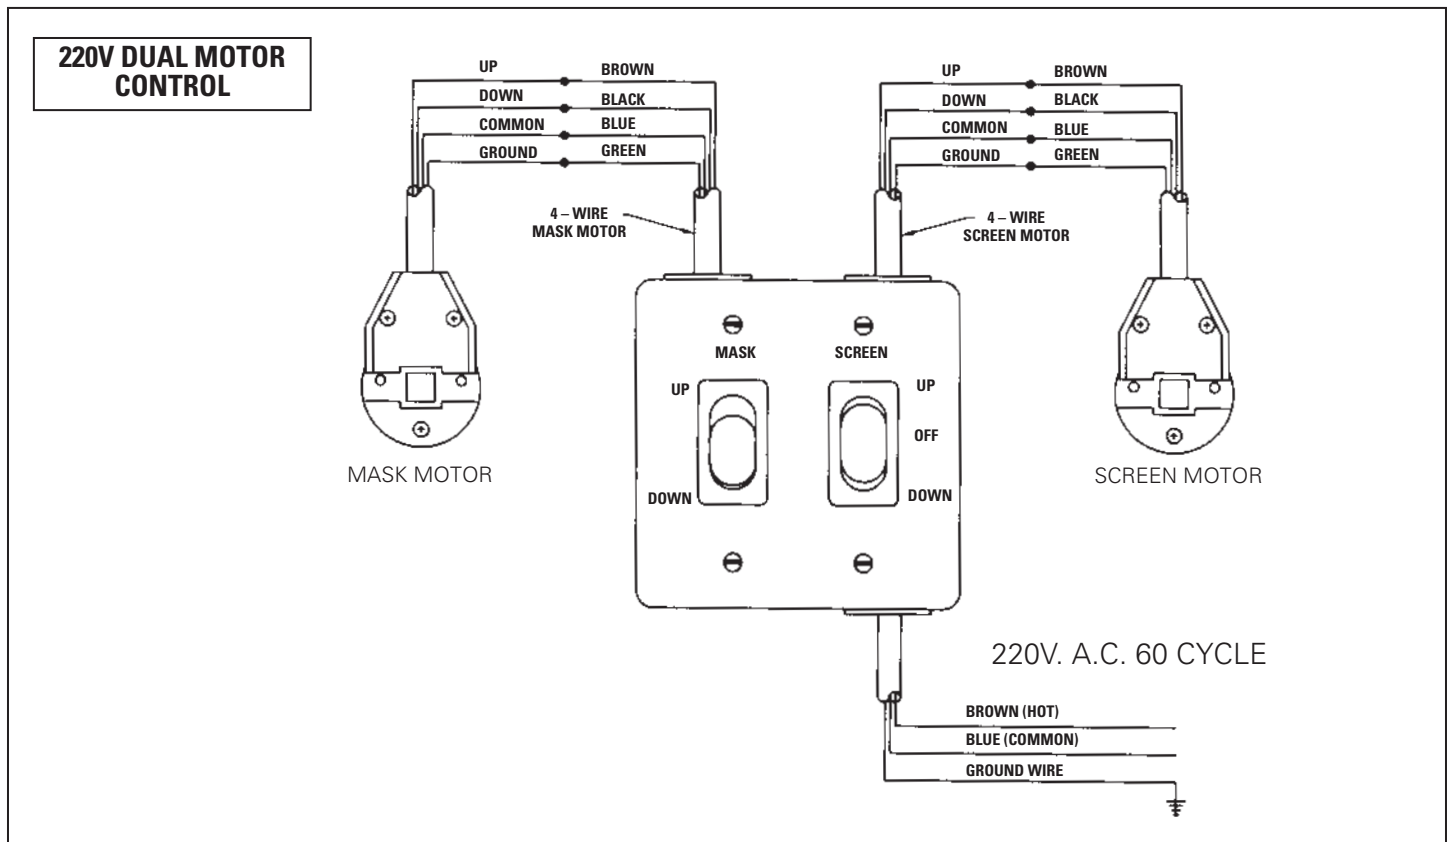

# SUGGESTED METHODS OF INSTALLATION

**METHOD A**

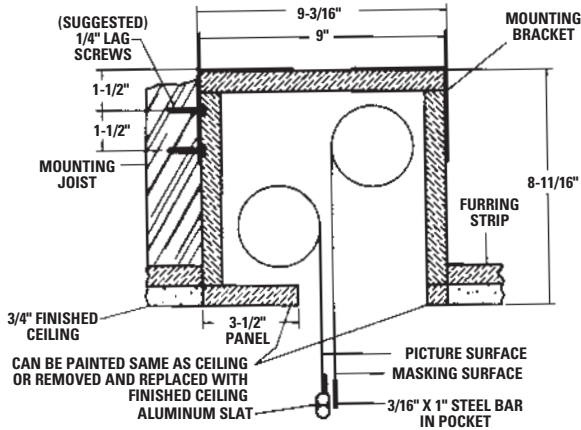


Offset mounting, recessed above ceiling. For plaster, dry wall, tile or paneling. Bottom of case painted same finish as ceiling.

**NOTE:**


**MUST MARK HOLE LOCATION OF SCREWS IN 3-1/2\"/>**

**METHOD B**

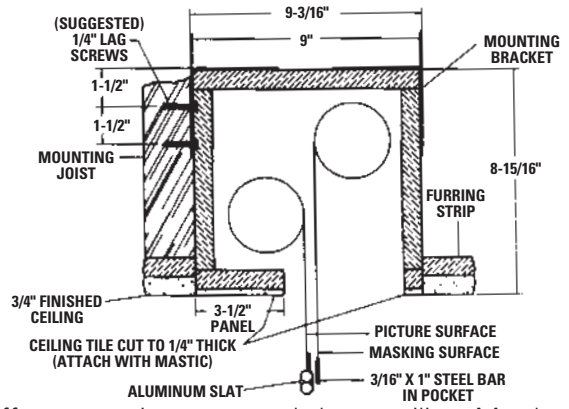


Offset mounting, recessed above ceiling. May be adapted for 3/4\"/>

**METHOD C**

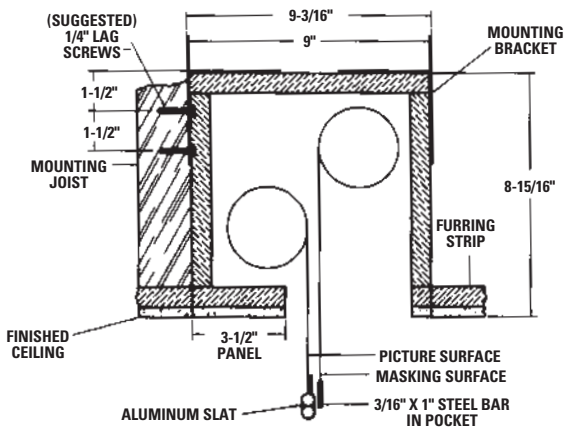


Offset mounting, recessed above ceiling. May be adapted for 1/4\"/>

**METHOD D**

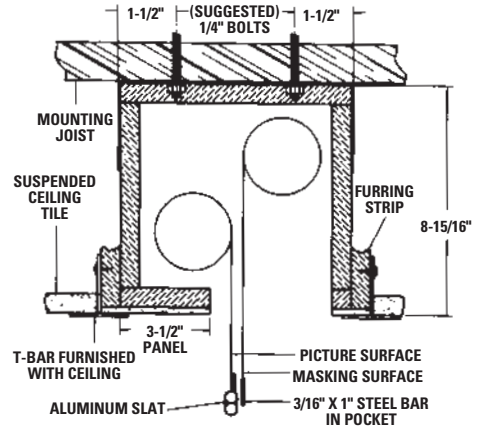

Flush mounting, recessed above ceiling. For use with dropped ceiling. May also be adapted for use with acoustical or other ceiling 3/4\"/>

# TENSIONED DUAL MASKING ELECTROL® INSTRUCTIONS

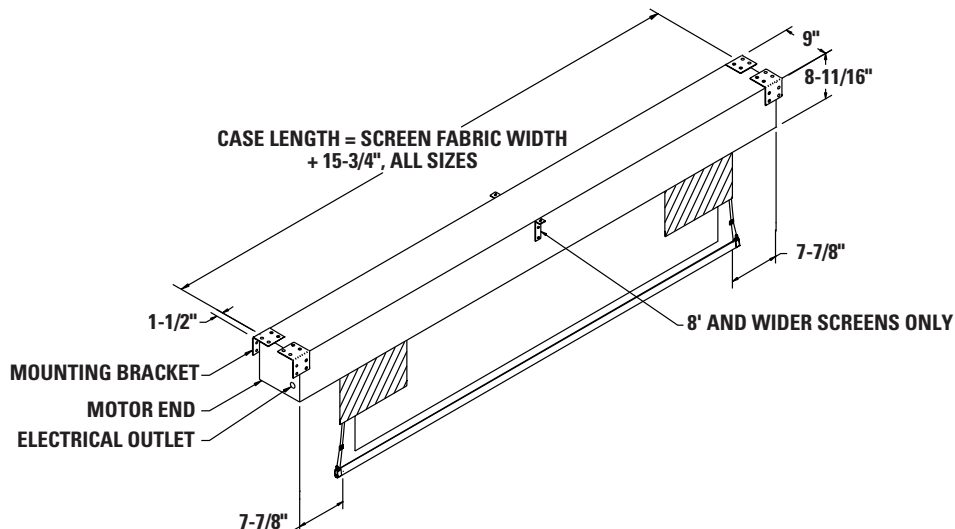

## TROUBLESHOOTING

SYMPTOM	CAUSE	SOLUTION
1. Screen will not operate. Motor does <b>not</b> hum.	<p>(a) Incorrect line voltage.</p> <p>(b) Blown fuse.</p> <p>(c) Tripped circuit breaker.</p> <p>(d) No power to operating switch or junction.</p> <p>Power at junction box</p> <p>(e) Thermal overload tripped.</p> <p>(f) Broken wire in the <b>"down"</b> or <b>"up"</b> position.</p> <p>(g) Defective motor, limit switch or capacitor.</p> <p>(h) Capacitor burned out.</p>	<p>(a) Verify 115-125V (or 220-240V). If insufficient voltage, rewire incoming electric line.</p> <p>(b) Replace fuse.</p> <p>(c) Reset circuit breaker.</p> <p>(d) Check above. Tighten all loose wire connections. Correct any improper connections.</p> <p><b>"Down" Position</b> Check for power across black and white leads.</p> <p><b>"Up" Position</b> Check for power across red and white leads.</p> <p>(e) Let motor cool down for 15 minutes. Try again.</p> <p>(f) Check for continuity. Cut off old splice and reconnect.</p> <p>(g) Replace motor assembly. <b>NOTE: Motor is a sealed assembly.</b></p> <p>(h) Replace motor assembly.</p>
2. Incorrect stopping position in <b>downward</b> direction.	(a) <b>"Down"</b> limit switch out of adjustment	(a) See installation instructions.
3. Incorrect stopping position in <b>upward</b> direction.	(a) <b>"Up"</b> limit switch out of adjustment	(a) Adjust <b>"up"</b> limit switch. See installation instructions
4. Noise. <b>NOTE: Screen will operate with a low pitched hum.</b>	(a) Gear Noise.	(a) Replace motor assembly.
5. Coasting.	(a) Defective brake.	(a) Replace motor assembly.

